


VIDEO SOURCES

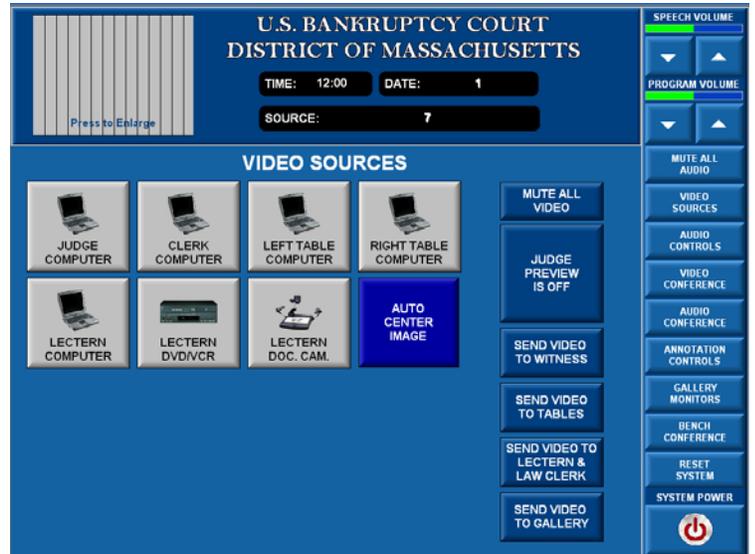

The **VIDEO SOURCES PAGE** allows you to select video sources to display on the courtroom monitors. Press any of the buttons on this page to select a source for display. Some sources have associated control pages and selecting those sources will display the control page as well as select that source.

Video Sources

JUDGE COMPUTER- Press this button to select the Judge PC as a video source.

CLERK COMPUTER- Press this button to select the Clerk PC as a video source.

LEFT TABLE COMPUTER- Press this button to select the left table PC as a video source.

RIGHT TABLE COMPUTER- Press this button to select the right table PC as a video source.

LECTERN COMPUTER- Press this button to select the Lectern PC as a video source.

LECTERN DVD/VCR- Press this button to select the lectern DVD/VCR as a video source.

LECTERN DOC CAM- Press this button to select the document camera as a video source.

AUTO CENTER IMAGE- Press this button to automatically center the image on the screen.

MUTE ALL VIDEO- Press this button to mute all video except the Judge. This “mutes” all video sources making them unavailable to all monitors except the judge PC.

JUDGE PREVIEW IS OFF- Press this button to display selected video to the Judge and Clerk monitors *only*. In the OFF state, the video is displayed to **all** monitors.

SEND VIDEO TO WITNESS- Press this button when in Judge Preview Mode to send the currently selected video source to the Witness location.



SEND VIDEO TO TABLES- Press this button when in Judge Preview Mode to send the currently selected video source to the Tables location.

SEND VIDEO TO LECTERN & LAW CLERK- Press this button when in Judge Preview Mode to send the currently selected video source to the Lectern & Law Clerk location.

SEND VIDEO TO GALLERY- Press this button when in Judge Preview Mode to send the currently selected video source to the Gallery location.

Touch Panel Functions

ANNOTATION CONTROLS

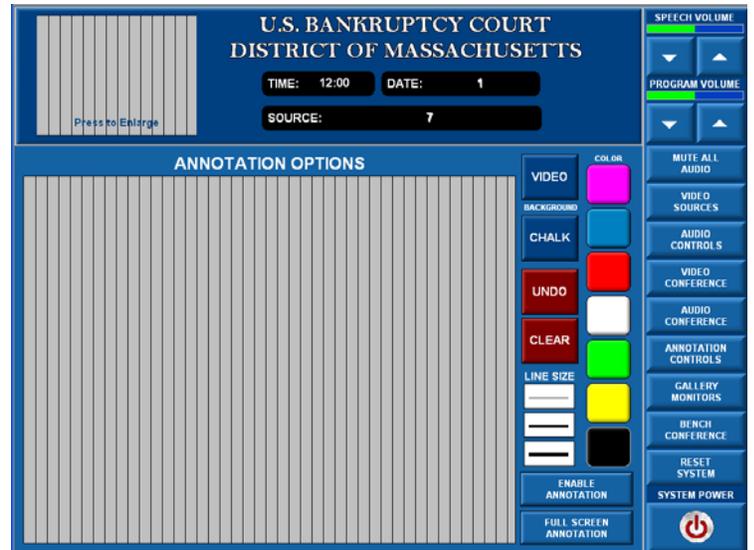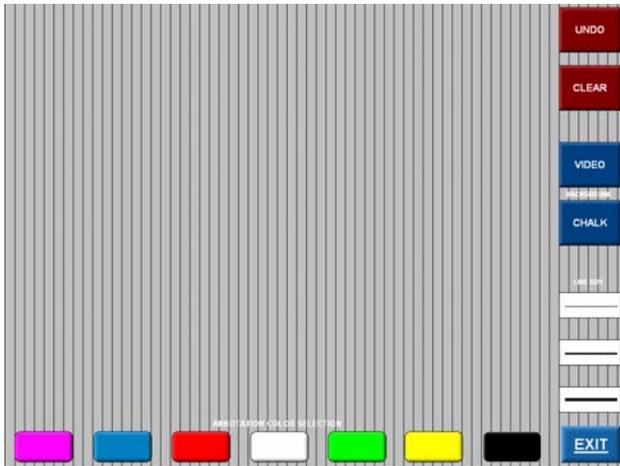

The **ANNOTATION CONTROL PAGE** allows you to access the annotation features of your system.

VIDEO- Press this button to place the annotation system in Video Mode.

CHALK- Press this button to place the annotation system in Chalkboard Mode.

Note: When the chalkboard is mode *on*, the courtroom monitors display a solid white background and you annotate as if you were drawing on a chalkboard. When the Video Mode is *on*, whatever video source is selected will be displayed on the monitors and annotation is done on top of the displayed image.

UNDO- Press this button to erase the last annotation that was created.

CLEAR- Press this button to erase all annotations and to close the on-screen menu.

LINE SIZE- Press any of these buttons to choose between a thin, medium of thick line style.

COLOR- Press any of these buttons to select the annotation line color.

ENABLE ANNOTATION- Press this button to enable annotation on the courtroom monitors. Without annotation enabled, annotation will not be available to the courtroom monitors.

FULL SCREEN ANNOTATION- Press this button to see a full size screen for annotation. The same features are available, they are just arranged a little differently on the screen. To return to the regular screen, press EXIT.

EXIT- Press this button to return to the regular Annotation Page if you are in the full screen mode.